


Step By Step Instructions

1. Make Sure Both Water Supplies are turned OFF or the Main Shut Off ,Open cartridge to relieve back pressure.
2. Remove handle cap and screw, then retainer clip.
3. Pull Out the cartridge stem to the full open position.
4. Unscrew the Screw of Cartridge Removal Tool until it backs out of the recess in the puller.
5. The hex nut of Cartridge Removal Tool should be unscrewed so that at least one thread is visible at the bottom.
6. Set the tool on the cartridge.Fit the Ears on the tool between the ears of cartridge .
7. Tighten the Screw down into the cartridge stem, Turn until it stops.
8. Screw the Hex Nut down until it stops on the valve.
9. Twist Handle by hand.Try to turn and rotate the cartridge in the Body.If it will not Pull,then proceed as in Step 10.
10. Hold the Tee Handle from turning and tighten the hex nut with wrench for two Full turns. The Cartridge can now be Pulled out of the Valve Body.

Note:-This Tool Can Be Used For removing 1220,1222 and 1225 Moen Cartridges

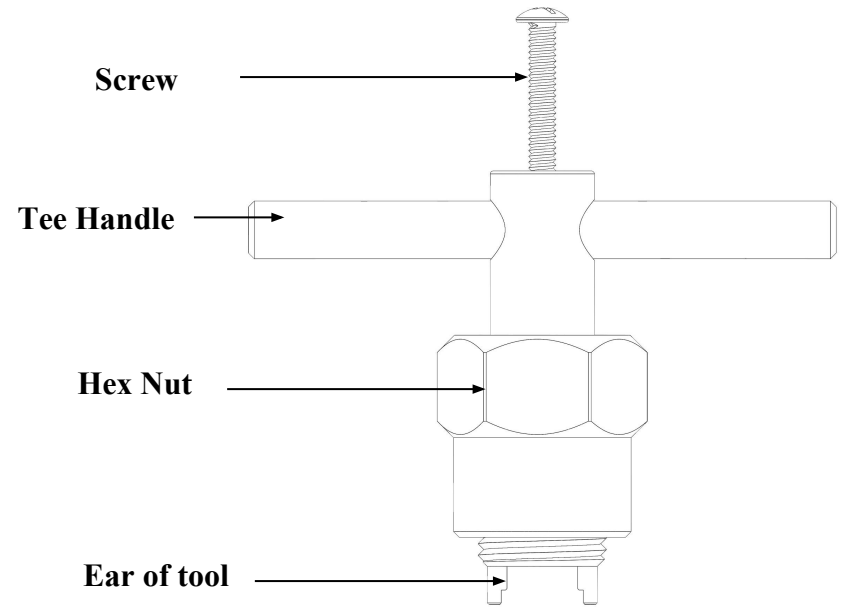

Tools Required:-
Screw Driver
Adjustable Wrench

ALUIDS

The Information Contained in this Document is the property of **Krome USA Inc.** and should not in any way divulged to any third party without the prior written consent of the company